



MERCURY HUB ASSEMBLY SCHEMATIC – 162 SERIES HUBS

1. DRIVESIDE AXLE ENDCAP w/ MACHINED STEP
2. FREEHUB BODY
3. AXLE / FREEHUB TRUST COLLAR
4. AXLE - ** Removable only when bearings are out of hub **
5. HUB SHELL
6. NON-DRIVESIDE AXLE DUST CAP
7. ENDCAP WASHER
8. NON-DRIVESIDE AXLE ENDCAP

PARTS MUST BE ASSEMBLED AS SHOWN TO ENSURE PROPER OPERATION OF THE HUB. FAILURE TO DO SO WILL RESULT IN POOR PERFORMANCE, PREMATURE HUB FAILURE OR A POSSIBLE CRASH. DIRECT ALL ASSEMBLY QUESTIONS TO: support@mercurycycling.com

DO NOT DUPLICATE RUBBER FREEHUB SEAL DURING SERVICE / REASSEMBLY. DOING SO WILL CAUSE HUB TO BIND, PREMATURE DAMAGE TO HUB INTERNALS AND A POSSIBLE CRASH.

